



Click here to email [Sales@Eco-BuildingProducts.com](mailto:Sales@Eco-BuildingProducts.com)  
Click here to order online at [Eco-BuildingProducts.com](http://Eco-BuildingProducts.com)  
Click here to call us at 231.399.0700

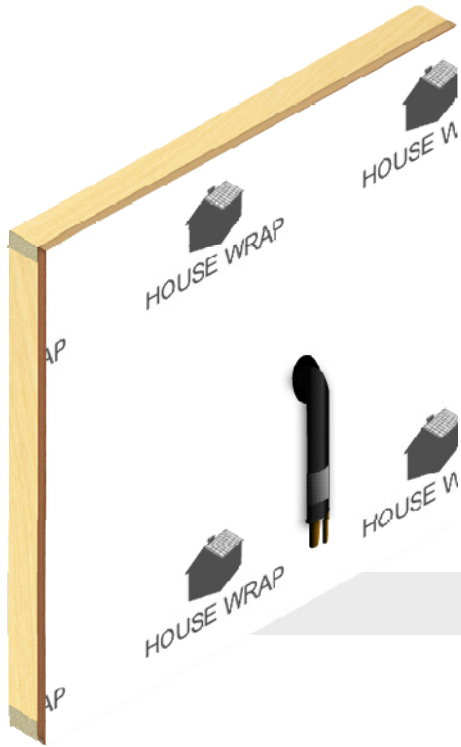

## How to Install A/C Line Set (after WRB)


**IMPORTANT:**  
Always refer to house wrap  
or building paper  
manufacturer's guidelines.

1

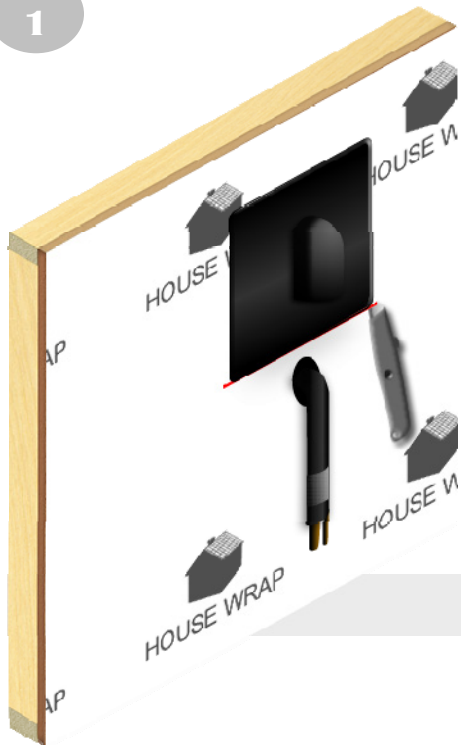


Using the Quickflash® panel as a guide, mark the length of the panel plus 1/4" on each side 2" above penetration onto the WRB and using a utility knife, cut a slit along the mark.

2

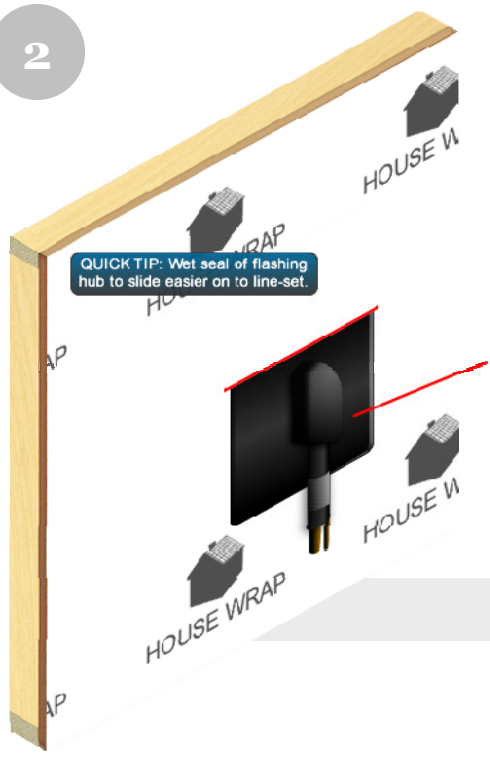


Slide the Quickflash® panel up underneath the WRB and over the penetration pressing down firmly to ensure a flush seal.

3

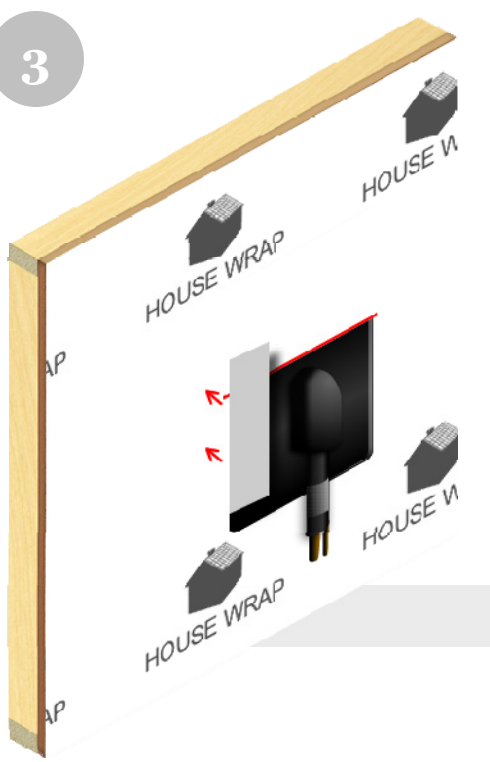


Tape on left side.

4

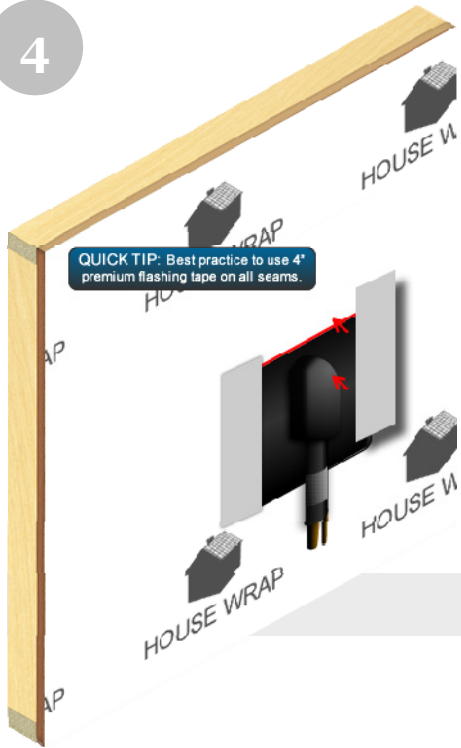


Tape on right side.

5

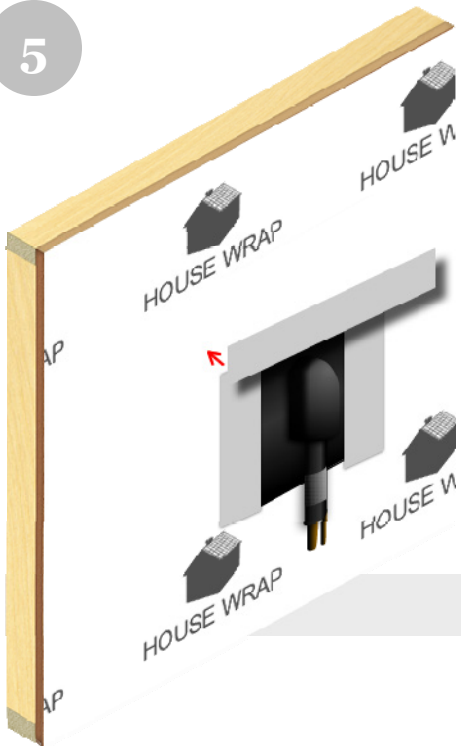

Tape across the top.

6

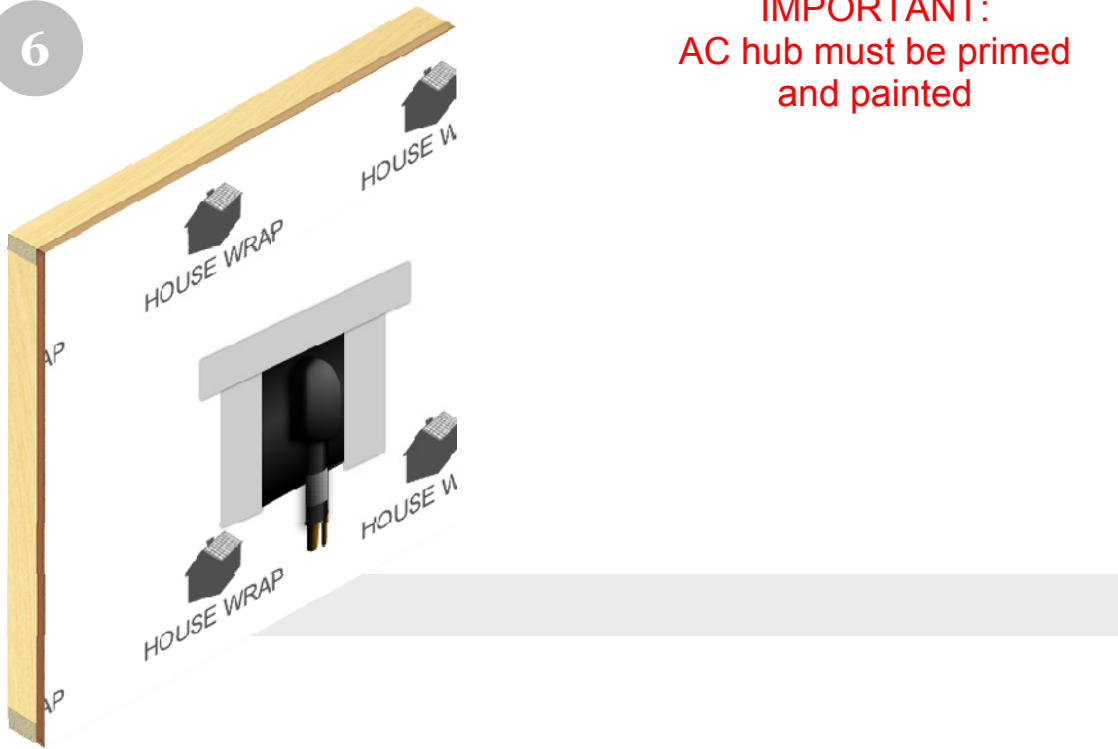

**IMPORTANT:**  
AC hub must be primed  
and painted