

Click here to email Sales@Eco-BuildingProducts.com
Click here to order online at Eco-BuildingProducts.com
Click here to call us at 231.399.0700

How to Install A/C Line Set

(before WRB)

IMPORTANT:
Always refer to house wrap
or building paper
manufacturer's guidelines.



1



Slide Quickflash® panel
onto line-set firmly
pressing panel against the
wall or studs.

2




Using non-corrosive fasteners, secure the Quickflash® panel to the structure from the midpoint of the panel to the top.

3



Slide the weather resistant barrier underneath the Quickflash® panel to the bottom of the line-set.

4

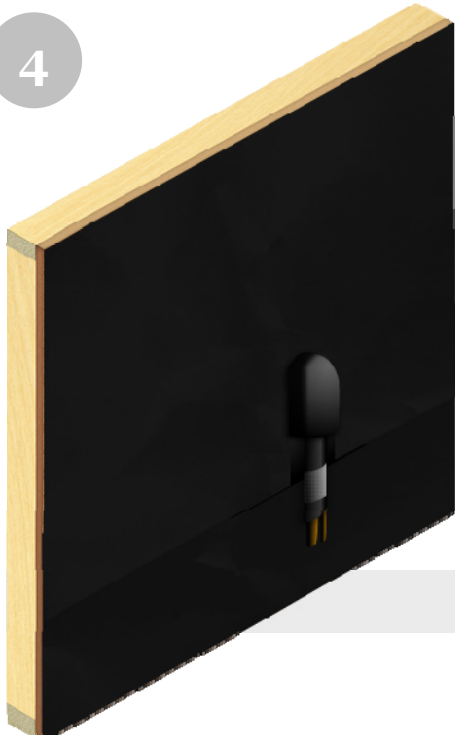

Install the weather resistant barrier carefully cutting an opening around the protruding line-set, over the top of Quickflash® panel using shingle style method extending to the bottom of the panel or further down.